



Accessories

10026904- UBIFAST Configuration Tool



General Data

Intro	The UBIFAST configuration tool is used to configure the various parameters available in our IXARC programmable encoders
Notes	Includes: Configuration Tool, Terminal Block Adapter & Power Supply
Config Functionality	<ul style="list-style-type: none"> - Compact housing with WLAN to create HOTSPOT - Connects to Smart Phone/ Tablets/ Notebooks - Web Browser based simple Programming - Configuration Data sent back to POSITAL via E-mail
Config Programable Interfaces	Incremental, SSI, SSI + Incremental
Config Programmable Parameters	<p>Incremental</p> <ul style="list-style-type: none"> - PPR [1-16484] - Output Driver [Push-Pull (HTL) or RS422 (TTL)] - Counting Sequence <p>SSI</p> <ul style="list-style-type: none"> - Singleturn Resolution - Number of Revolutions - Output Code - Preset Value - Code Sequence



Contact



Contact Us

All dimension in [inch] mm. This drawing and the information contained is for general presentation purposes only. Please refer to the "Download" section for detailed technical drawings. © FRABA B.V., All rights reserved. We do not assume responsibility for technical inaccuracies or omissions. Specifications are subject to change without notice.