

Eurotherm®

Precision at the heart of your process

Eurotherm EPC2000 programmable controller



Benefits

The EPC2000 programmable single loop temperature and process controller provides efficient and repeatable precision control in a convenient and easy to deploy DIN rail and surface mounting format.

The controller combines precise control and measurement performance with a high speed Ethernet connection incorporating an integral switch for daisy chain connection to supervisors, panels or PLCs.

- Complements your PLC and/or can be used stand-alone
- Precision analog measurement for repeatable control
- Flexible communication options
- Easy to deploy
- Dual Ethernet ports
- Can reduce total system costs

Key Features

- Precision Single Loop Control
- Setpoint Programming
- Math and Logic
- Communication Protocols
 - Modbus Master/Slave (TCP/IP)
 - EtherNet/IP Server
 - PROFINET IO
- Help defend OEM knowledge and IP with OEM Security
- EN ISO 13849 -1 Performance Level "c" for limit functions

eurotherm.com/eplc2000

 **WATLOW**[®]
Powered by Possibility

Specifications


General

Controller function	Single loop DIN mount PID controller range with autotune, on/off and valve positioning (no slidewire required). Single loop setpoint programmer/profiler up to 10 profiles of 24 segments or 20 profiles of 8 segments. 24V ac/dc options.
Ethernet	100BASE-T with integral switch. Achilles® Communications Robustness Testing Level 1. (not applicable to PROFINET IO variant)
Measurement input	Single input. +/- 0.1% accuracy
PID control	Two PID sets are available as standard with separate proportional band for heat and cool. Enhanced auto-tuning control with cutback to minimize overshoot and oscillation. Fast reacting precision control to setpoint changes or after process disturbances. Enhanced valve positioning (unbounded) algorithm. Gain scheduling allows PID selection for a wide range of operating situations, including deviation from setpoint, absolute temperature, output level and others. PV and SP feed-forward functions.
Setpoint Programmer/Profiler	Maximum 20 program sequences of 8 segments. Options for 1x8, 1x24, 10x24, with textual program and segment names Holdback ("guaranteed soak"), event outputs, time to target, ramp rate, dwell, step and call segment types. Additional timer functions available.
User function block wiring	Optional function blocks including: totalizer, math, logic and multiplexing, BCD conversion, counter/timer, LIN16 and Zirconia.
Additional functions	Average, min, max. 6 configurable alarms with manual, automatic, non-latching and event types plus alarm delay function and blocking. Alarms may be inhibited in standby. 5 recipes with 40 selectable parameters switchable from digital input.
Backup and configuration tools	Eurotherm iTools software for backup and configuration. iTools also connects using Ethernet (Modbus TCP) and/or serial (Modbus RTU).

Mechanical Mounting

Mounting	Mounting is top hat EN50022 DIN rail or surface mounting through fixing screw holes provided. Vertical mounting only. No horizontal separation required between units.
IP Rating	IP20*
Weight	0.21kg (0.46lb)

* IP20 rating achieved with all connector plugs fitted

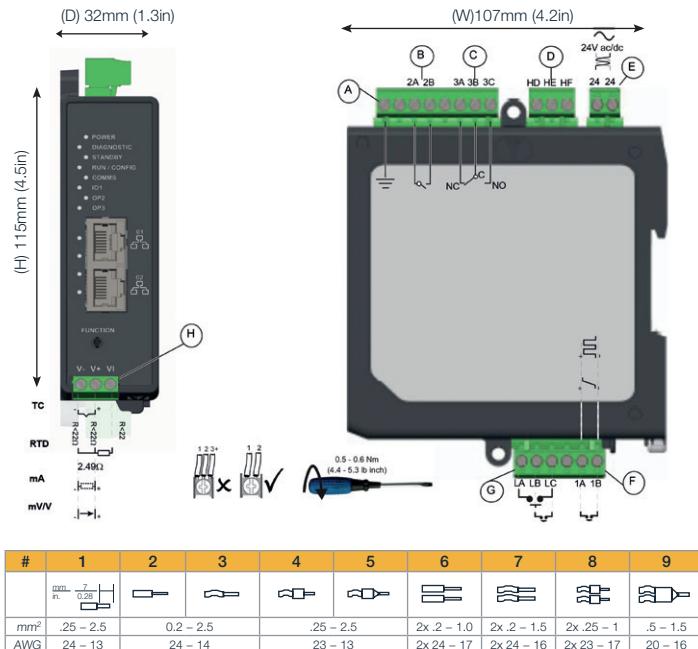

1. Maximum exposed conductor length
2. Solid cable
3. Multi strand cable
4. Multi strand cable, ferrule
5. Multi strand cable, ferrule with skirt
6. Solid cable x2
7. Multi strand cable x2
8. Multi strand cable x2, ferrule x2
9. Multi strand cable x2, twin ferrule

Key	Title	Terminals	Function	Symbol
A	Functional ground connection		Functional ground connection point	
B	OP2 (Output 2)	2A 2B	Relay Form A (Normally Open)	
C	OP3 (Output 3)	3A 3B 3C	Relay Form C, Change Over Relay	
D	COMMS (Serial Communication)	HD HE HF	EIA-485	
E	Power Input (Low voltage only)	24 24	24Vac/Vdc	
F	IO1 (Input/Output 1) - Option 1	1A(+) 1B(-)	Analog output	
	IO1 (Input/Output 1) - Option 2		Logic (SSR drive), output	
		1A(+) 1B(-)	Contact Input, connected to Logic output	
G	DI x2 (Digital Input)	LA LB LC		
		Digital Input 1	LA LC	Contact Input
		Digital Input 2	LB LC	Contact Input
H	IP1 (Input 1), Sensor Measuring Analog Input - Do not run input wires with power cables - Ground shielded cable at one point only - Sensor input not isolated from the logic output & digital inputs - Use appropriate compensating cable to extend thermocouple cabling Note: Fixed connector - not removable.	V- V+ Or V- V+ VI Or V- V+ Or V- V+	Thermocouple (TC) Resistance Temperature Detector (RTD) Current (mA) Voltage (mV/V)	

Specifications

Inputs and Outputs							
Analog Inputs	1 Universal input						
Form A relay output	1						
Form C relay output	1						
Logic IO (SSR drive)	1 (mutually exclusive with dc Output)						
DC Output	1 (mutually exclusive with Logic IO)						
Contact closure logic input	2						
Communications							
Ethernet	Dual Ethernet switch. Shielded grounded RJ45 connections supporting 10/100BASE-T auto sensing. Fixed IP address or DHCP. Modbus/TCP Slave, EtherNet/IP Server, PROFINET IO and Modbus TCP/IP Master						
Serial	EIA-485 Half duplex Baud rates 9600, 19200 Modbus RTU 8 data bits, odd/even/no parity selectable						
Universal process input							
Input types	Thermocouples, Pt100/Pt1000 RTD, 4-20mA, 0-20mA, 10V, 2V, 0.8V, 80mV, 40mV, zirconia (oxygen probe), pyrometers. For other input types, contact your Eurotherm supplier for advice. Accuracy $\pm 0.1\%$ reading, when subject to the necessary field calibration.						
Sample time	Sample rates are 20Hz for mV/mA, 16Hz for thermocouple and 10Hz for RTD.						
Mains rejection	Series mode rejection 48-62Hz >60dB. Common mode rejection >150dB						
Sensor break	AC sensor break. Break detected within 3 seconds worst case.						
Input filtering	OFF to 60 seconds filter time constant.						
User calibration	User 2 point input adjust (offset/gradient), transducer scaling						
Thermocouple	K, J, N, R, S, B, L, T as standard, plus 2 downloadable custom curves Linearization accuracy CJ calibration accuracy: $<\pm 1.0^\circ\text{C}$ at 25°C ambient CJ ambient rejection ratio: better than 40:1 from 25°C ambient CJ automatic (internal), variable (external fixed 0 - 50°C - 32-122°F)						
Input Ranges		40mV	80mV	0.8V	2V	10V	RTD (Pt100)
Range	Min	-40mV	-80mV	-800mV	-2V	-10V	0Ω (-200°C; -328°F)
	Max	+40mV	+80mV	+800mV	+2V	+10V	400Ω / 4000Ω (850°C; 1562°F)
Thermal stability from 25°C (77°F) ambient		$\pm 0.4\mu\text{V}/^\circ\text{C}$ $\pm 13\text{ppm}/^\circ\text{C}$	$\pm 0.4\mu\text{V}/^\circ\text{C}$ $\pm 13\text{ppm}/^\circ\text{C}$	$\pm 0.4\mu\text{V}/^\circ\text{C}$ $\pm 13\text{ppm}/^\circ\text{C}$	$\pm 0.4\mu\text{V}/^\circ\text{C}$ $\pm 13\text{ppm}/^\circ\text{C}$	$\pm 0.8\mu\text{V}/^\circ\text{C}$ $\pm 70\text{ppm}/^\circ\text{C}$	$\pm 0.01^\circ\text{C}/^\circ\text{C}$ $\pm 25\text{ppm}/^\circ\text{C}$
Resolution		1.0µV unfiltered	1.6µV	6µV	41µV	250µV	0.05 °C (0.09 °F)
Electrical noise (peak to peak with 1.6s input filter)		0.8µV	3.2µV	32µV	82µV	250µV	0.05 °C (0.09 °F)
Linearity accuracy (best fit straight line)		0.003%	0.003%	0.003%	0.003%	0.007%	0.033%
Calibration accuracy at 25°C (77°F) ambient		$\pm 4.6\mu\text{V}$ $\pm 0.053\%$	$\pm 7.5\mu\text{V}$ $\pm 0.052\%$	$\pm 75\mu\text{V}$ $\pm 0.052\%$	$\pm 420\mu\text{V}$ $\pm 0.044\%$	$\pm 1.5\text{mV}$ $\pm 0.063\%$	$\pm 0.31^\circ\text{C}$ (0.56°F) $\pm 0.023\%$
Input resistance		100MΩ	100MΩ	100MΩ	100MΩ	57kΩ	—
Bulb current		—	—	—	—	—	190µA/180µA

Specifications

Logic IO (SSR Drive)		
Output rating	ON 12V dc 44mA max. Minimum control cycle time 50ms (auto)	
Output functions	Time proportioned heat, time proportioned cool. SSR drive alarm and event outputs, interlock outputs, other functions available using soft wiring.	
Contact closure (input)	Contact open > 400Ω, Contact closed < 100Ω	
Input functions	Auto/Manual select, Integral hold, Control inhibit, Program run functions, Recipe select, PID select, BCD bit, Autotune enable, Standby and other functions available using soft wiring.	
DC Output		
	Current output	Voltage output
Range	0-20mA	0-10V
Load resistance	<550Ω	>450Ω
Calibration accuracy	< ±(0.5% of reading + 100uA offset)	< ±(0.5% of reading + 50mV offset)
Resolution	13.5 bits resolution	13.5 bits resolution
Output functions	SCR/Power control drive. Proportional valve. Retransmission to chart recorder or other instrumentation. Other functions using soft wiring.	
Relays (Form A & Form C)		
Types	Form A (normally open) Form C (changeover) Integrated snubbers (MOV type)	
Output functions	Time proportioned heat, time proportioned cool. SSR Drive. Direct valve raise/lower. Alarm and event outputs, interlock outputs, other functions available using soft wiring.	
Rating	Min 100mA @ 12V, Max 2A @ 264V ac resistive.	
Contact closure logic inputs		
Thresholds	Open > 400Ω, Closed < 100Ω	
Input functions	Auto/Manual select, Integral hold, Control inhibit, Program run functions, Recipe select, PID select, BCD bit, Autotune enable, Standby and other functions available using soft wiring.	

Specifications

Operator interface			
Type	No integrated HMI, support for external HMI via communications. Third-party HMI recommended. Diagnostic indication via LEDs on front face.		
Function Blocks	Function	Standard	Toolkit enabled
Instrument	Interface to Instrument wide settings	1	–
Loop	Enhanced Eurotherm PID Loop	1	–
Programmer	Ramp/Dwell Programmer	1	–
Timer	Timer based functions	1	–
Alarm	General purpose analogue alarm monitoring	6	–
Recipe	General purpose recipe function	1	–
Comms	Interface to serial and Ethernet comms	2	–
AI	Interface to main analog input	1	–
IP Monitor	Input monitoring (min, max, other functions)	2	–
IO	Interface to Inputs and Outputs	6	–
Remote Input	Interface to remote (communications) input	2	–
Zirconia*	Zirconia Probe input	1	–
Math2	Two input math functions	–	4
Lgc2	Two input logic operations	–	2
Lgc8	Eight input logic operations	–	8
OR	Eight input logical "OR" operation	–	8
BCD	BCD Conversion	–	1
Mux8	Eight input multiplexer	–	3
Total	Totalizer	–	1
Counter	Counter block (32 bit)	–	1
UsrVal	User values (freely assignable)	–	4
Wires		50	200
Lin16	16 point linearization	1	–


*Dependent on instrumentation/options ordered

Standards	
Operating temperature	0°C to 55°C (32°F to 131°F)
Storage temperature	-20°C to 70°C (-4°F to 158°F)
Operating/storage humidity	5% to 90% RH non-condensing
Atmosphere	Non-corrosive, non-explosive
Altitude	<2000 meters (<6561.68 feet)
Vibration and Shock	EN 61131-2 (5 to 11.9Hz @ 7mm peak to peak displacement, 11.9-150Hz @ 2g, 0.5 octave min.) EN 60068-2-6 Test FC, Vibration. EN 60068-2-27 Test Ea and guidance, Shock
Flammability of plastic materials	UL746C-V0
Emissions	LV PSU units to EN 61326-1:2010 Class A
Immunity	EN 61326-1:2010 Industrial Locations
Approvals and certification	CE EN 61326, RoHS EN 50581:2012, UL, cUL, REACH, EN ISO 13849-1 Performance Level "c", CCC Exempt Achilles® CRT Level 1 Cybersecurity Assessment (not applicable to PROFINET IO variant)
Electrical safety	EN 61010-1:2010 (installation category II, pollution degree 2)



Specifications


Isolation Diagram

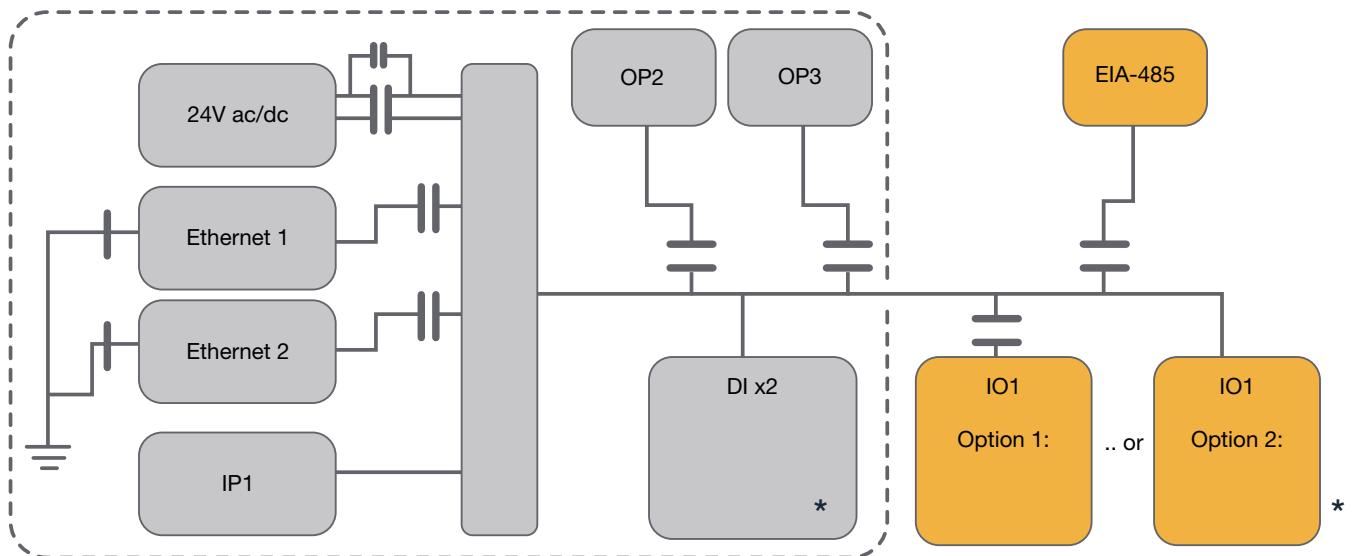

Key						
	300Vac DOUBLE Isolation		300Vac BASIC Isolation	*	Contact in/ Logic out – not isolated from each other	
				*		

Specifications

EPC2000 Order Codes

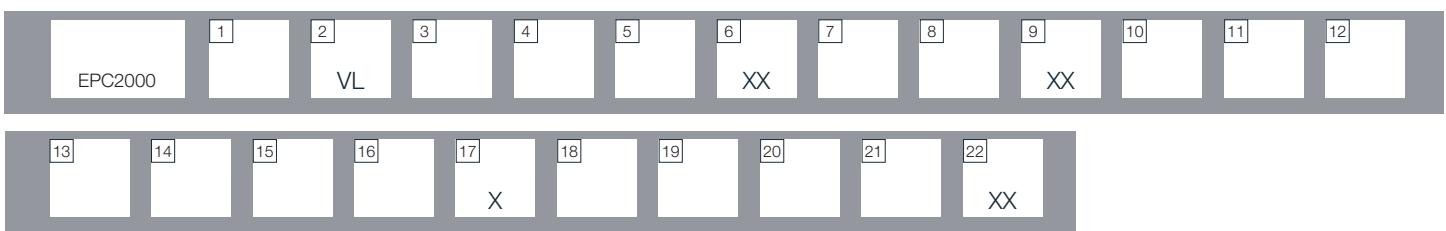


* Note 1. Order code options 14-22 are optional

Basic product		8 OEM Security	16 Input 1 Range*	20 Units*
EPC2000 DIN Rail Mount Controller with Universal Precision Input		XXX OEM None OEM Security Enabled	X Not Configured (Default)	X Not Used (Default)
1 Type	9 Gain Scheduling Sets	XX Two sets Standard (Default)	F Sensor Range or Full Scale	C Degrees Celsius (Default)
CC Controller (Default)	1 8 Segment Basic	0 to 100°C or 32 to 212°F or	1 273 to 373K	F Degrees Fahrenheit
CP Programmer	P1 1 x 24 Segment Advanced Programmer	0 to 200°C or 32 to 392°F or	2 273 to 473K	K Kelvin
P10 10 x 24 Segment Advanced Programmer	P10 10 x 24 Segment Advanced Programmer	0 to 400°C or 32 to 752°F or	3 273 to 673K	
P20 20 x 8 Segment Advanced Programmer	P20 20 x 8 Segment Advanced Programmer	0 to 600°C or 32 to 1112°F or	4 273 to 873K	
		0 to 800°C or 32 to 1472°F or	5 273 to 1073K	
		0 to 1000°C or 32 to 1832°F or	6 273 to 1273K	
		0 to 1200°C or 32 to 2192°F or	7 273 to 1473K	
		0 to 1300°C or 32 to 2552°F or	8 273 to 1573K	
		0 to 1600°C or 32 to 2912°F or	9 273 to 1873K	
		0 to 1800°C or 32 to 3272°F or	A 273 to 2073K	
2 Supply Voltage	12 Extended Warranty	XXXXX Standard Warranty	17 Reserved*	
VL 24Vac +10%, -15% (48 to 62 Hz); 24V dc +20, -15%; 5% Ripple (Default)	XXXXX	CERT1 None Required Supplied with Certificate of Conformity	X Not Used (Default)	
3 Outputs	13 Certificate of Conformity	XXXXX CERT1 None Required Supplied with Certificate of Conformity	18 Digital Input A Function*	
LRR Logic SSR Drive, 1 Form A Relay	X Not Required	X Not Configured (Default)	W Alarm Acknowledge	Model
DRR Isolated DC Output, 1 Form A Relay	C EIA-485 Modbus RTU	1 Auto/Manual	M Auto/Manual	EPC2000ACC Accessories for EPC2000 DIN Rail Controller
		2 Programmer Run/Hold	R Programmer Run/Hold	
		3 Loop Track	K Loop Track	
		4 Local Setpoint Select	P Local Setpoint Select	
		5 Programmer Reset	T Programmer Reset	
		6 Remote Setpoint Select	U Remote Setpoint Select	
		7 Recipe Select	V Recipe Select	
4 Serial Communications	14 Default Application*	XXXXX	19 Digital Input B Function*	
XX Not fitted	X Not Configured	X Not Configured (Default)	W Alarm Acknowledge	1 Type
C1 EIA-485 Modbus RTU	1 PID Heat (IO1), High/Low Alarm (OP3) (Default)	W Auto/Manual	M Auto/Manual	RES2R9 2.49 Ohm Resistor
	2 PID Heat (IO1), Cool (OP2), High/Low Alarm (OP3)	1 Programmer Run/Hold	R Programmer Run/Hold	RES250 250 Ohm Resistor
		2 Loop Track	K Loop Track	RES500 500 Ohm Resistor
		3 Local Setpoint Select	P Local Setpoint Select	ITOOLS iTools Configuration Software
		4 Programmer Reset	T Programmer Reset	STCON Standard Set of Connectors
5 Ethernet Communications	15 Main PV Sensor Type*	XXXXX	5 Remote Setpoint Select	
E1 Modbus/TCP Slave	X Not Configured (Default)	X Recipe Select		
E2 EtherNet/IP & Modbus TCP/ IP Slave	M Linear 0 to 80m V dc			
E3 PROFINET IO (Achilles Level 1 Certification not applicable)	V Linear 0 to 10Vdc			
E5 Modbus TCP/IP Master and Slave	2 Linear 0 to 20mA			
	4 Linear 4 to 20mA			
	B Type B Thermocouple			
	J Type J Thermocouple			
	K Type K Thermocouple			
	L Type L Thermocouple			
	N Type N Thermocouple			
	R Type R Thermocouple			
	S Type S Thermocouple			
	T Type T Thermocouple			
	Pt100			
6 Digital Inputs	XX Default 2x Contact Closure Digital Inputs			
7 Tool Kit Blocks	XX None (Default) Toolkit Blocks Enabled			

Specifications

DIN PSU Order Codes

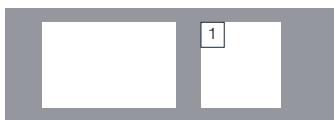

Model	
DINPSU	DIN Rail Mount 24V dc PSU

1 Type	
1A2	1.2 A (30W) 24V dc Output

Eurotherm US LLC

44621 Guilford Drive, Suite 100
20147 Ashburn, VA
USA

Phone: +1-703-724-7300

www.eurotherm.com

Contact your local sales representative



Document Number HA033270USA Issue 7

Watlow, Eurotherm, EurothermSuite, EFit, EPack, EPower, Eycon, Chessell, Mini8, nanodac, piccolo and versadac are trademarks and property of Watlow its subsidiaries and affiliated companies.
All other trademarks are the property of their respective owners.

©Watlow Electric Manufacturing Company. All rights reserved.